




# TARYA136 / KTARYA136

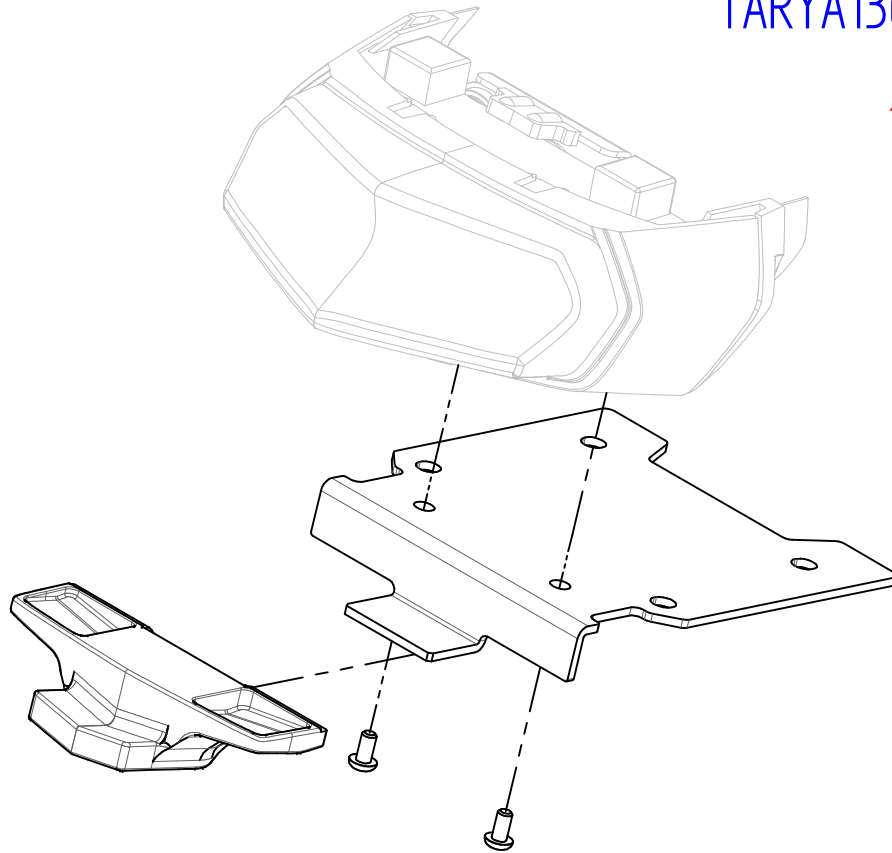

1



2

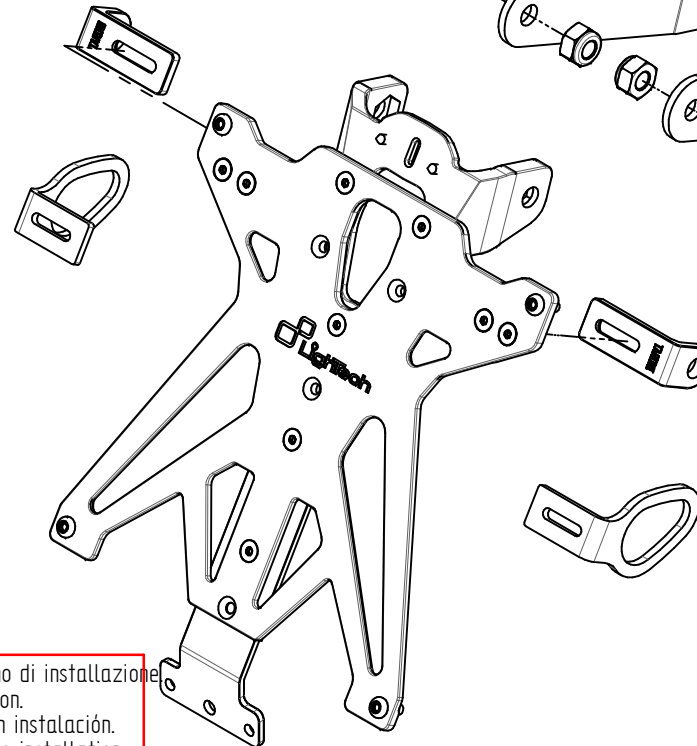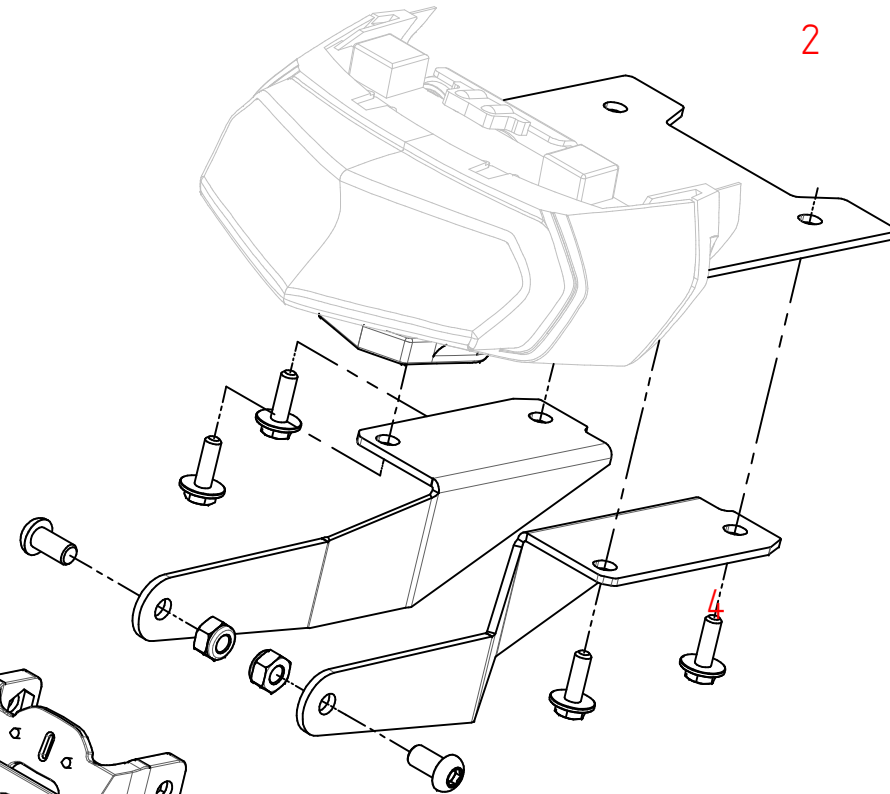

Supporto Frecche Aftermarket  
Supports for Aftermarket Indicators

Supporto Frecche Originali  
Supports for OEM Indicators

# DA PROVARE



IT) E' necessario l'intervento di personale professionale per tutti i prodotti che necessitano di installazione.  
EN) The assistance of professional staff is necessary for all parts which require installation.  
ES) Se necesita que sea montado por profesionales para todos los productos que necesitan instalación.  
FR) L'assistance d'un professionnel est nécessaire pour toutes les pièces qui nécessitent une installation.  
DEU) Der Eingriff von Fachpersonal ist notwendig für alle Artikel die installiert/montiert werden müssen.